

CROSS STACK LASER GAS ANALYZER

DATA SHEET

Cross stack laser gas analyzer (ZSS) provides continuous measurement of density of HCI contained in flue gas in waste incineration plant and industrial waste disposal facility, NH₃ in power plant and denitration equipment, CO, CO₂, and O₂ in iron and steel plant and chemical plant with high speed response. Since ZSS is installed directly on the flue(pipe) where objective gas flow to be measured, preparation is not required for measured gas to be introduced to the analyzer, which is required for sampling method. This analyzer can be used under high dust conditions, so it is possible to install upstream of the bagfilter where gas sampling is normally difficult. This is the first laser gas analyzer for environment and process in Japan produced by Fuji.

FEATURES

- 1. Maintenance free thanks to using the long-term stable parts.
- 2. Running cost is minimized by no need of gas sampling devices and having few parts to replace.
- 3. Long and high stability due to almost no drift.
- 4. Since adopting the near-infrared semiconductor laser which emit light of the wavelength of measured component, hardly affected by interference of other gas.
- 5. It is suitable for injection control of slaked lime, measuring the residual ammonia gas and monitoring and control



ZSS

of converter furnace of combustible gas recovery due to high-speed response for 1 to 5 seconds.(high-speed response type: 1 to 2 seconds)

- 6. It is measurable at high temperature and dust circumstance. In addition performance of dust resistance has been improved.
- 7. It is environment-friendly product. Because power consumption is 75VA or lower when 100V AC.
- 8.2-component analyzer equipped with dual beam for CO/O2 is added.

SPECIFICATIONS

measurable component and rang	ye.					
Component		Min.measuring range	Max.measuring range	Measured gas temperature		
HCI		10ppm•m	5000 ppm•m	400°C or less		
HCI+H2O (*1)		50ppm•m(HCI)	1000 ppm•m (HCI)	130 to 400°C		
NH ₃		15 ppm•m	5000 ppm•m	450°C or less		
NH3+H2O (*1)		50ppm•m(NH ₃)	1000 ppm•m (NH3)	130 to 450°C		
O2 (low output type)		4vol%•m	100vol%•m	300°C or less		
O2 (For use high dust)		4vol%•m	50vol%•m	1200°C or less		
O2 (For combustion control)		25vol%•m	100vol%•m	400 to 1200°C		
СО		2.0vol%•m	50vol%•m	300°C or less		
CO (For use in high temp.)		10vol%•m	50vol%•m	1200°C or less		
CO ₂		2.0vol%•m	50vol%•m	300°C or less		
CO2 (For use in high temp.)		10vol%•m	50vol%•m	1200°C or less		
CO+CO ₂		2.5vol%•m	50vol%•m	300°C or less		
CO+CO ₂ (For use in high temp.)		10vol%•m	50vol%•m	1200°C or less		
CH ₄		100ppm•m	50vol%•m	300°C or less		
CO+O ₂	CO	200ppm•m	2vol%•m	400 to 1200%		
(ppmCO+For combustion control O ₂)	O2	25vol%•m	100vol%•m	400 10 1200 C		
CO+O2 CO (ppmCO+For use high dust O2) O2		200ppm•m	2vol%•m	1200°C or loss		
		5vol%•m	50vol%•m			
CO+O ₂	CO	4vol%•m	50vol%•m	200%C or loss		
(vol%CO+low output type O ₂)	O2	10vol%•m	100vol%•m			

(*1) Range for H₂O is fixed at 50vol%•m. (Range in the case stack (optical path length) diameter is 1m) Max. and min. ranges for each stack diameter

* Stack diameter = Optical path length

= (Max. and min. ranges when stack diameter is 1m) ÷ Stack diameter (Example: In case stack diameter is 2m for HCI measurement, Max.range: 2500ppm and min. range: 5ppm).

Measurement principle:

Non-dispersive infrared absorbance system (NDIR) **Measuring method:**

Cross-stack system (path system)

Use application:

Waste incineration plant, industrial waste disposal facility, power plant iron and steel plant, paper plant, pulp mill, chemical plant and bioplant etc...

Light source:

Near-infrared laser

Laser class:

Class 1 (excluding $CO+O_2$ meter and some of O_2 meters.) Outline (D × W × H) mm:

Receiver unit (180 × approx.400 × approx.155mm) Transmitter unit (240 × approx.400(432) × approx.160mm) 320 × approx.400 × 160mm (CO+O₂ meter) Control unit (137 × 255 × 440mm)

Mass:

Receiver/Transmitter unit: Approx. 10kg Control unit: Approx. 8kg

Structure:

Outdoor use type, dustproofing/rainproofing structure (IP65)

Box finish color:

Receiver/Transmitter box: gray Control unit cover: blue

Control unit case: silver

Material:

Receiver unit / Transmitter unit: Aluminum, SUS316 Control unit: Aluminum

Materials of gas-contacting parts:

SUS316, BK7, FKM, PTFE, glass-cloth, silicone

Air purge connection diameter:

RC1/4 (tube ø8 × 6)

Power supply: Rated voltage 100 to 240V AC ±10% Rated frequency 50/60 Hz

Power consumption:

Max. rated power: Approx. 75VA or less

Calibration interval:

Once every six months (Maintenance cycle may vary depending on the operating environment.)

Indicator (control unit): LCD with back light

Cable length:

Receiver unit to Transmitter unit: Standard 2m (Maximum 25m)

Receiver unit to control unit: Standard 5m (Maximum 100m)

Analog output:

4 to 20mA DC or 0 to 1V DC x 2 (4)

Isolated output indicated in the parenthesis is optional. (1 to 5V DC, 0 to 5V or 0 to 10V is available.)

Allowable load: 4 to 20mA DC 550Ω or less, 0 to 1V DC $100k\Omega$ or more

(Output measurement value and O_2 corresponding value. Average value and instantaneous value are switchable by the settings.)

Analog input:

4 to 20mA DC x 2 (6)

Note: Number in parenthesis is option.

Measured gas pressure, measured gas temperature, measured gas velocity, O_2 gas concentration, water concentration, air purge pressure

(Measurement concentration correction, O₂ correction or alarm output is performed according to the input signal.)

Contact output:

Relay contact output (contact capacity 24V DC 1A (100V AC 0.5A)1a or 1b × 5 (Standard: 1a, 1b: for power supply off only)

Low light transmission, outside the range of upper/lower limits, device failure, during hold/during calibration, power supply off.

Contact input (option):

Photo coupler receiver contact input (operating voltage 12 to 24V DC / 5 to 20mA) \times 3

Average value reset signal, switching instantaneous value/ moving average value and remote hold

Alarm output (screen-displayed):

LD failure, LD temperature error, high gas temperature, air purge (low pressure), box temperature warning, low light transmission, PD over range, connection error, Al under, Range (H-Limit) or Range (L-Limit)

Display contents:

Component, concentration (instantaneous value, average value O_2 correction instantaneous value and O_2 correction average value), alarm (fault status)

CONTACT OUTPUT CONTENTS

Low light transmission:

Contact output is performed (close) when the amount of light transmission is insufficient. (1a contact)

Outside the range of upper/lower limits:

According to the preset upper or lower limit alarm value, contact output is performed (close) when it becomes lower than alarm upper/lower limit. (1a contact)

Device failure:

Contact output is performed (close) when laser failure, laser temperature control failure, exceeding the amount of light transmission or communication error are occurred. (1a contact)

During hold/during calibration:

While AO output is held by the hold setting, the values, output (close) of which is held, is the ones just before the holding or arbitrary set values.

Output (close) during calibration (1a contact)

Power supply off:

Output (close) while power supply is off (1b contact)

CONTACT INPUT CONTENTS (OPTION)

Average value reset signal:

Output of converted average value is started from the initial state by applying rectangular-wave voltage (pulse width 2 sec or more) to the input terminal of average value resetting. Output is reset by inputting and restarted by opening.

Switching instantaneous value/moving average value:

Switching to and from the instantaneous value and the average value of the analog output is performed by applying rectangular-wave voltage (pulse width 2 sec or more) to the input terminal for switching between the instantaneous value and the moving average values.

Remote hold:

The analog output is held by applying rectangular-wave voltage (pulse width 2 sec or more) to the remote hold input terminal, and restarted by applying it again.

FUNCTIONS

O₂ correction:

Conversion of measured HCl, NH_3 and CO gas concentrations into values at standard O_2 concentration Correction formula:

 $C = \frac{21 - On}{C} \times Cs$

 $= \frac{1}{21 - \text{Os}} \times \text{Cs}$

C: Converted concentration

Cs:Measured concentration of sample gas

Os:Measured O_2 concentration (Upper limit settable 1 to 20% O_2)

On:Standard O_2 concentration (value changeable by setting; 0 to 19% O_2)

The result of calculation is indicated and output in an analog output signal.

INSTALLATION ENVIRONMENT

Ambient temperature:

-20 to 55°C (Receiver unit/Transmitter unit), -5 to 45°C (control unit)

Ambient humidity:

90% R.H. or less

Measurable optical path length (inner diameter of stack): 0.5 to 10m

Standard flange:

JIS10K 50A flange (JIS B 2212)

Purge:

Instrument air (compressor must be installed when power supply cannot be provided. Does not contain oil and mist). N₂ for O₂ meter except O₂ for combustion control.Pressure 0.5MPa or more depending on measured gas velocity.

Purge flow rate:

20L/min or more (depending on measured gas temperature, velocity, pressure, moisture and dust)

One-side air purge flow rate: (L/min) = Gas flow rate (m/s)×10 (in case of 50A pipe)

Measured gas condition:

Temperature: Refer to page 1.

Pressure:

 ± 10 kPa (O₂ for combustion control is -10kPa to 100kPa) Moisture:

50vol% or less (or Should not be saturated water vapor.) Velocity:

Range of purge flow rate (gas flow rate (m/s) = one side flow rate (L/ min / 10)

Note) When measuring high-temperature gas at 500°C or higher, install a pressure sensor on the air-purge unit to monitor air purge. If measurement is taken while purge is not performed, the device may be damaged.

Dust:

5 to $40g/m^3$ (N) (depending on environmental conditions such as measuring component, equipment specification, light path length and particle diameter).

In case of high dust environment, consult with Fuji. **Vibration:**

0.5G or less (0.2G or less when the frequency range is 20 to 40Hz) (when optical path length is 1m)

Mounting angle:

Horizontally ± 5 degrees or less (No dew condensation should accumulate on the window.)

PERFORMANCE (EXCEPT FOR H₂O)

Repeatability:

 $\pm 1.0\% FS$ (depending on measuring component and measuring range)

Linearity:

 $\pm 1.0\% FS$ (depending on measuring component and measuring range)

Zero drift:

 $\pm 2.0\%$ FS (depending on measuring component and measuring range)

Interference from other gas components:

 $\pm 2.0\%$ FS (The gasses which have no absorption within the wavelength range of measured gas (several tens pm) do not interfere in principle).

Minimum detectable limit:

1% of minimum detectable limit

Response time (90% FS response):

1 to 5 seconds (high-speed type: approx.1 to 2seconds) **Warm up time:**

90 minutes or less

(* Excluding influenced range with absorptive gases such as HCl and $\text{NH}_{3}\text{)}$

EC DIRECTIVE COMPLIANCE CE

Low voltage safety:

EN61010-1(2010) EN62311(2008)

Electromagnetic:

"Installation Category II"

compatibility

EN61326-1(2006) EN61326-2-3(2006) EN61000-3-2(2006) EN6100-3-3(2008), A1(2009), A2(2009)

BASIC PRINCIPLE

Near-infrared semiconductor laser is adopted for the light source and photo-diode is adopted for photo-detection. Each measured gas component has its own wavelength range where the gas absorbs the light (see the figure below).

The wavelength range consists of a set of many absorption lines, and one of these lines is used for measurement.

As measurement is performed in this very narrow wavelength range, no other gas does not have an interference in principle.

To detect the gas concentration, used is not a variation of light intensity, but intensity of modulated signal amplitude.



SCOPE OF DELIVERY

- Receiver box
- Transmitter box
- Control unit
- Angle adjustment mechanical section (required 2 units, one for receiver and the other for transmitter)
- · Cable between receiver unit and transmitter unit (specified length)
- Cable between receiver unit and control unit (specified length)
- Hexagon socket head cap screw (Connecting bolt between angle adjustment mechanical section and receiver box)
- · Standard accessory set, instruction manual

OPTIONAL ITEMS

- Spare parts for one year (ZBN1SS12)
- Calibration gas cell (*1) (*2)
- Cable between receiver unit and transmitter unit (For calibration) (*1)
- Cable between receiver unit and control unit (For calibration) (*1)
- Standard gas (ZBM), pressure regulator (ZBD)
- Recorder (when necessary, Fuji's product type PHL/PHF, etc.)
- Others
- *1: One set of the cables and calibration gas cell are necessary for installation and annual maintenance.
- *2: Standard length 1m (200mm or 500mm when the measuring range is low concentration)

STANDARD ACCESSORIES

Name	Quantity	Specification
Bolt	8 (16)	M16×55 (70) SUS (*)
Nut	8 (16)	M16 SUS (*)
Spring washer	8 (16)	M16 SUS (*)
Flat washer	8 (16)	M16 SUS (*)
Companion flange packing or flange packing specified for use in high temperature	2	According to flange specifications
Bolt for angle adjustment	6	Hex socket bolt M8 × 70
Power supply fuse	2	
Connecting bolt between re- ceiving unit and transmitter unit	12	Hex socket bolt M5 × 12
Instruction manual	1	

(*When "B" or "C" is specified in the 9th digit in a code symbol, quantity is 16 pieces. 8 pieces are attached in other cases.)

(*When "B", "C" or "D" is specified in the 9th digit, Bolt length is 70mm. It is 55mm in other cases. Inch-sized bolts are not applicable.)

SPARE PARTS FOR ONE YEAR (ZBN1SS12)

Name	Quantity	Remarks				
Silicon packing A	2 pieces	For bellows (ZZP*ZSSTK7N3508P1)				
O-ring 2 pieces		(ZZP*ZSSTK7P2530P5)				

CODE SYMBOLS

When ordering, be sure to submit the order sheet on the last page of this Data Sheet.

			ZSS			-	-				-	Ī
Digit	Spec	ification	Note	++++	··· ···	<u>+ + +</u>				<u>+</u> +		Ĩ
4	Measurable components	CO CO (For use in high temperature) HCI	Note 1 Note 1, 2 Note 1	A B C								
		HCI+H2O CO2	Note 1	F								
		CO ₂ (For use in high temperature)	Note 2	<u>. </u>			11.		1_
		$CO+CO_2$ $CO+CO_2$ (For use in high temperature)	Note 3 Note 2, 3	K								Ĺ
		O ₂ (low output type)	, , , ,	P								
		O2 (For use in high dust) O2 (For combustion control)	Note 4	Q T								Ĺ
		CO+O ₂ (ppmCO+For combustion control O ₂)	1	v t	*****	- +	- 1- †		+ - -	++-		[_
		$CO+O_2$ (ppmCO+For For use high dust O_2) $CO+O_2$ (vol%CO+low output type O_2)		U S								Ĺ
		CH4	Note 1	R								Ĺ
		NH3+H2O	Note 1, 5	X								
5	Unit	ppm ma/m ³		1								Ĺ
		vol%		5								
		ppm (1st comp.), vol% (2nd comp.) vol%(1st comp.), vol% (2nd comp.)		7								
6	Measuring range	0 to 2	Note 6, 7	ĸ								Γ
		0 to 4		S								Ĺ
		0 to 5		<u>L</u>	+++				<u> </u> - -	++-		-
		0 to 15		0								
		0 to 20 0 to 25		1 T								Ĺ
		0 to 50		A			- -					_
		0 to 100 0 to 200		B C								
		0 to 250		D								Ĺ
		0 to 500		J E								Ĺ
		0 to 1000 0 to 2000		F								
		0 to 5000		н								Ĺ
		0 to 6000 Others		M X								Ĺ
7	Measuring range	0 to 2	Note 6, 7	K								Γ
	(2nd components)	0 to 2.5 0 to 4		Q								Ĺ
		0 to 5		Ĺ								Ĺ
		0 to 15	+	<u>V</u> 0	•+				+ - -	++-		-
		0 to 20 0 to 25		1 T								Ĺ
		0 to 50		A								Ĺ
		0 to 100 0 to 200	+	<u>В</u> С	+++					++-		-
		0 to 250		D								Ĺ
		0 to 500		J								Ĺ
		0 to 1000		F	+++				<u></u> - -	++-		-
		0 to 5000		H								Ĺ
		0 to 6000 Others		M								Ĺ
-	Modification No.	None		Y		\square	\parallel		\parallel	\parallel	\perp	L
9	Flange rating	10K 50A (JIS B 2212)			A A	+++	++		\vdash	+	+	F
		10K 100A DN50/PN10			B							
		ANSI #150 2B			D		\parallel					Ĺ
10	Number of analog output points	2 points 4 points			0 1							
11	Number of analog input points	2 points 6 points	Note 8			Å	\parallel		$ \uparrow $	\parallel	\top	Γ
12	Analog output	4 to 20mA DC	NOLE O			1	+		\square	+	+	F
		0 to 20mA DC 0 to 1V DC				2 3						
		0 to 5V DC				4						
13	Contact output/input	5 output points, No input				5	++	-	\parallel	+	+	F
1/	Cable length between receiver	5output points, 3 input points				1			\parallel	\parallel	+	L
'*	and control unit	10m	Note 9				B					
		20m 30m					C					
		40m					Ē					
		50m 80m					F G					
		100m Others					H					Ĺ
		Outers	1				X		Π	11		í.

			755	
Digit	Speci	fication	Noto	
	Cable leasth between receiver		NULE	
15	Cable length between receiver	2m	Note 10	
	and transmitter	5m 10m		
		10111 15m		
		15111 20m		
		2011 25m		
		Othere		x
16	Display and operation manual			
		English		
		Chinasa		
17				
18	Measuring optical path length	Om	Note 11	
1 10	(unit: 1m)	1m		1
	(ante m)	2m		
		3m		3
		4m		4
		5m		5
		6m		6
		7m		7
		8m		8
		9m		9
19	Measuring optical path length	0.0m	Note 11	0
	(unit: 0.1m)	0.1m		1
		0.2m		2
		0.3m		3
		0.4m		4
		0.5m		5
		0.6m		6
		0.7m		7
		0.8m		8
		0.9m		9
20	Measuring optical path length	0.00m	Note 11	0
	(unit: 0.01m)	0.05m		5
		(Used only when 10m is specified)		9
21				N
22	High-speed/ AGC	Standard	Note 10	N
		High-speed/AGC		Н

Note 1) When you order the HCI meter, CO meter and NH₃ meter, Specify the conversion basis of O₂ concentration (settable within 0 to 19vol% O₂: Integer)

Note 2) When gas temperature is 500°C or more, specify the the type for use in high temperature

Note 3) Specify the same range for CO and CO2. If different range is desired for CO and CO2, specify the "X" at 6 digit and give a description of each range. Only use where gas temperature is 400°C or more

Note 4)

Note 5) Only use where the gas temperature is 130°C or more.

Note 6)

When you order the CO+O₂ meter, select a concentration of CO at 6th digit of measuriable range and O₂ at 7th digit. Specify the range within the max/min range calculated from path length. If the range exceeds that "the measuring range x the stack length" Note 7)

(optical path length), consult Fuji. Note 8)

Code B is unselectable for CO+O₂ meter.

Note 9) Others of cable length between receiver and control unit. When specify the "X" at 14th digit, 10m or more is only selectable. Note 10) Others of cable length between receiver and transmitter. When specify the "X" at 15th digit, 5m or more is only selectable. Note 11) If it is 10m, specify the "9" at 18th digit, "9" at 19th digit and "9" at 20th digit.

How to specify measuring optical path length

Example: 2.25m 2 for 19th digit, 2 for 19th digit and 5 for 20th digit 10m 9 for 18th digit, 9 for 19th digit and 9 for 20th digit

LIST FOR COMBINATIONS OF MEASURABLE COMPONENTS, UNITS AND MEASUREMENT RANGES

Component		Measuring range				
CO		0 ~ 2, 2.5, 4, 5, 10, 15, 20, 25, 50 vol%				
CO (For use in high temp.)		0 ~ 10, 15, 20, 25, 50 vol%				
HCI		0 ~ 10, 15, 20, 25, 50, 100, 200, 250, 400, 500, 1000, 2000, 5000 ppm or mg/m ³				
CO ₂		0 ~ 2, 2.5, 4,5, 10, 15, 20, 25, 50 vol%				
CO ₂ (For use in high temp.)		0 ~ 10, 15, 20, 25, 50 vol%				
O ₂ (low output type)		0 ~ 4, 5, 10, 15, 20, 25, 50, 100 vol%				
O2 (For use high dust)		0 ~ 4, 5, 10, 15, 20, 25, 50 vol%				
O2 (For combustion control)		0 ~ 25, 50, 100 vol%				
CH ₄		0 ~ 100, 200, 250, 400, 500, 1000, 2000, 5000 ppm or mg/m ³				
		0 ~ 2, 2.5, 4, 5, 10, 15, 20, 25, 50 vol%				
NH ₃		0 ~ 15, 20, 25, 50, 100, 200, 250, 400, 500, 1000, 2000, 5000 ppm or mg/m ³				
HCI+H ₂ O	1st comp.: HCI	0 ~ 50, 100, 200, 250, 400, 500, 1000 ppm or mg/m ³				
	2nd comp.: H ₂ O	0 ~ 50 vol%				
NH ₃ +H ₂ O	1st comp.: NH ₃	0 ~ 50, 100, 200, 250, 400, 500, 1000 ppm or mg/m ³				
	2nd comp.: H ₂ O	0 ~ 50 vol%				
CO+CO ₂	1st comp.: CO	0 ~ 2.5, 4, 5, 10, 15, 20, 25, 50 vol%				
	2nd comp.: CO2	0 ~ 2.5, 4, 5, 10, 15, 20, 25, 50 vol%				
CO+CO ₂	1st comp.: CO	0 ~ 10, 15, 20, 25, 50 vol%				
(For use in high temp.)	2nd comp.: CO2	0 ~ 10, 15, 20, 25, 50 vol%				
CO+O ₂	1st comp.: CO	0 ~ 200, 250, 400, 1000, 2000, 5000, 6000 ppm, 2vol%				
(ppmCO+For combustion control O ₂)	2nd comp.: O2	0 ~ 25, 50, 100 vol%				
CO+O2	1st comp.: CO	0 ~ 200, 250, 400, 1000, 2000, 5000, 6000 ppm, 2vol%				
(ppmCO+For use high dust O ₂) 2st comp.: O ₂		0 ~ 5, 10, 15, 20, 25, 50 vol%				
CO+O2	1st comp.: CO	0 ~ 4, 5, 10, 15, 20, 25, 50 vol%				
(vol%CO+low output type O2 ₂)	2st comp.: O2	0 ~ 10, 15, 20, 25, 50, 100 vol%				

	Parts name	Quantity	Туре
(1)	Cable between receiver unit and control unit (for calibration)	1	ZZP*ZSSTK4J1271C2
(2)	Cable between receiver unit and transmitter unit (for calibration)	1	ZZP*ZSSTK4J0641C3
(2)	Calibration gas cell (*3) (HCl, NH ₃ , CO,CO ₂ , CO+CO ₂ ,CH ₄)	1	ZZP*ZSSTK4J3676C1
(3)	Calibration gas cell (*3) (HCl+H ₂ O, NH ₃ +H ₂ O, O ₂)		ZZP*ZSSTK4J5026C1
(4)	Optical axis adjusting tool (laser pointer, target)	1	ZZP*ZSSTK4J1274C1
(5)	IR card (for NH₃)	1	ZZP*ZSSTK7N4505P1
(6)	Check cell	1	ZZP*ZSSTK4J2605C1
(7)	Filter regulator	1	ZZP*ZSSTK7N7466P1
(8)	Mist separator	1	ZZP*ZSSTK7H8049P1
(9)	R1/4 stopper (plug) for mist separa- tor	1	ZZP*ZSSTK738114P7
	Flow meter (20 to 100L/min) (*4)	1	ZZP*ZSSTK7N4624P1
(10)	Flow meter (4 to 50L/min) (*4)	1	ZZP*ZSSTK7N4624P2
	Flow meter (30 to 300L/min) (*4)	1	ZZP*ZSSTK7N8849P1
	Air-set box (20 to 100L/min)	1	ZZP*ZSSTK7N6685C1
(11)	Air-set box (4 to 50L/min)	1	ZZP*ZSSTK7N6685C2
	Air-set box (30 to 300L/min)	1	ZZP*ZSSTK7N6685C3
(10)	Air purge mechanism (20 to 100L/ min)	1	ZZP*ZSSTK7P1433C1
(12)	Air purge mechanism (4 to 50L/min)	1	ZZP*ZSSTK7P1433C2
	Air purge mechanism (30 to 300L/min)	1	ZZP*ZSSTK7P1433C3
(13)	BNC cable for optical axis adjust- ment	1	ZZP*ZSSTK7P2524C1





(1) Cable between receiver unit and control unit



Parts for adjusting the optical axis



ZSS

(11) Air set box



(12) Air purge mechanical part



(13) BNC cable for optical axis adjustment



OUTLINE DIAGRAM (Unit : mm)



flow rate falls, which will affect the measurement.

According to above, maintenance is required frequentlyand filter may be installed additionally depending on situation.

Note) Air or nitrogen purge should be performed if the equipment is

installed in a flue whether or not it is operated. In case operate the flue without performing purge, it may cause the fatal damage to the optical part.

EXTERNAL CONNECTION DIAGRAM (WHEN NUMBER OF ANALOG INTPUT IS 2 POINTS)

There are two types of output/input terminal.

Power supply terminal



Screw diameter : M4

AO terminal

17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

	Screw diameter : M3 or the equivalen
1 AO1+ 7 A	3 AO2+ 7.

	//011	Analog output 1	0	7.02
2	A01-		4	A02

19 AO4+ Analog output 4 17 AO3+ 18 AO3-]Analog output 3

,	Al t	err	nin	al			-	-						
	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	1	2	3	4	5	6	7	8	9	10	11	12	13	14

4 15 16 Screw diameter : M3 or the equivalent

5 Al1+ 6 Al1- Analog input 1

21 Al2+ 22 Al2- Analog input 2

Analog output 2

DI/DO terminal



25 DO5 26 DO5

- 27 DO6 28 DO6
- 13 DI1 Average value reset signal (option)
- 14 DI1 30 DI2
- Switching instantaneous value/moving average value (option) 29 DI2
- 32 DI3 Remote hold (option) 31 DI3
- Note) Unassigned terminal may be connected to internal circuit. So they should not be used as repeating terminals.

EXTERNAL CONNECTION DIAGRAM (WHEN NUMBER OF ANALOG INTPUT IS 6 POINTS)

31 32

Power supply terminal

	1	2		3		
100	to 24	10 1		S.		
(50/60)Hz	<u>z)</u>	F	G	

Screw diameter : M4

AO terminal

AO4 Unassigned Unassigned								
+	-					_		
7	8	9	10	11	12			
1	2	3	4 5		6			
+ - + - + - AO1 AO2 AO3								
1 AO1+ 2 AO1- Analog output 1								
3	AO2+					_		

Analog output 2 4 AO2-

Al terminal

	Al4	A	15	Al6					
+	+ -		-	+					
7	8	9	10	11	12				
1	2	3	4	5	6				
+	. - \11	+ A	- 2	+ A	- 3				
1 2	Al1+ Al1–]А]Analog input 1						
3 4	Al2+ Al2–]Analog input 2							

- 5 AI3+ Analog input 3 6 AI3- (Al extension

board is required)

5 AO3+ Analog output 3 6 AO3- (AO extension board is required)

- 7 AO4+ ¬Analog output 4
- 8 AO4-

Alia	iog ot	iipui	4		
(AO	exter	nsion	board	is	required

DI/DO	terminal

25	26	27	28	29	30	31	32	33	34	35	36
13	14	15	16	17	18	19	20	21	22	23	24
1	2	3	4	5	6	7	8	9	10	11	12

- 1 DI1 Average value reset signal
- (option) 2 DI1
- 3 DI2 Switching instantaneous value/ moving average value (option) 4 DI2
- 5 DI3
- Remote hold (option) 6 DI3
- 9 DI5 10 DI5
- 27 DO8 Power supply off 28 DO8

19 DO4

20 DO4

21 DO5

22 DO5

23 DO6

24 DO6

25 DO7

26 DO7

29 DO9

31 DO10

30 DO9

] Outside the range of upper/lowerlimits

- 13 DO1 14 DO1 Low light transmission

7 DI4

8 DI4

- 10 DO2 16 DO2 Device failure
- 32 DO10 17 DO3 33 DO11 · During hold/during callibration 34 DO11 18 DO3
- 7 Al4+ ¬Analog input 4
- 8 Al4- (Al extension board is required)
- Analog input 5 (Al extension board is required) 9 AI5+
- 10 AI5-
- 11 AI6+ Analog input 6 12 AI6- (Al extension board is required)

Note) Unassigned terminals may be connected to internal circuit. So they should not be used as repeating terminals.

MOUNTING DIMENSIONS (Unit: mm)



Do not install the device in a stack if air purge is not performed. It may become unusable because the window will get dirty.

a: Inner diameter of $\ensuremath{\varphi}50\ensuremath{\mathsf{mm}}$ or more

- b: 20 to 70mm (*5)
- c: Approximately 200 to 250mm (*6)
- d: 400mm or more (*7) e: 500 to 1500mm (*7)
- *5: When used in an enviroment with high dust, reserve at least 50mm.
- *6: When internal gas temperature is high, reserve the distance of 250mm or more. Note that, adjustable angle range narrows down, so mounting angle of flange pipe to mount stack should be adjusted accurately.
- *7: Sufficiently secure a space for installation which permits easy operation.
- *8: Scaffold is required for the both side of receiver unit and transmitter unit.*9: Use a flange provided with a valve where there is a risk of gas injection or the operator may be exposed to
- dangerous situation. *10: Tighten the flange with a torque of 118±114N-m. When tightening the flange, apply grease to the bolts
 - (recommendable to use grease containing molybdenum).

ROUGH GUIDE TO MOUNT THE COMPANION FLANGE

When θ is larger than 5°, mount it within the γ angle (\approx 5°) inside the circle with the A radius.



X: Inner diameter of flange of receiver unit and transmitter unit

Y: Length of flange of receiver uit and transmitter unit Z: Length of stack



 $A \approx 0.087 \times (Z + Y + 125)$



- 1.Code symbol ZSS
- 2. Parameter of measured gas

2. Parameter of measured gas					
Item	Min. value	Typical value	Max. value		
Measured gas concentration					
Temperature (°C)					
Pressure (kPa)					
Flow (m/s)					
Moisture (vol%)					
Dust (mg/m ³ (N))					
Other gas component (vol%/ppm)					
Other gas component (vol%/ppm)					
Other gas component (vol%/ppm)					
 3. Stack diameter (Inner diameter) (measure 4. Length B from stack (inner diameter) to fl 5. Length C from stack (inner diameter) to fl 6. Cable between receiver unit and control u 7. Cable between receiver unit and transmit 8. Spares for 1-year measurement no ne Instrument Receiver unit	ed optical path ange ange unit. ter unit. eed necessary ation air	length) A B C D E Stack	m m m m m m	on air	 Transmitter unit
9. Optional items no need necessary 10. Output of O ₂ correction value (for only H	Control ur	nit O meter)	no need necessa	ary	
11.Oxygen correction reference value (%) (When "necess	ary" is selected	d in 8)%		

12.Vibration no need necessary (_____G)

▲ Caution on Safety

*Before using this product, be sure to read its instruction manual in advance.

F Fuji Electric Co., Ltd.

International Sales Div

Sales Group Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan http://www.fujielectric.com Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425 http://www.fjielectric.com/products/instruments/