Mobile hot gas UV analyser





Mobile hot-wet gas analyser for power plant optimisation, low concentration measurement and process control

APPLICATION

The UV analyser UVA 17 HW m can be used for monitoring of e.g. NO, NO_2 , NH_3 , SO_2 and O_2 in incineration plants as well as for process measurements in the chemical and pharmaceutical industry.

This analyser is based on a heated spectrometer and measures all UV absorbing gas components. An ejector supplies the sample gas. Due to the heated measuring cell (200 °C) an elaborate gas conditioning is not required. The applied Xenon flash light is characterised by a 2 to 3 times higher lifetime compared to other light sources.

The integrated zirconium dioxide sensor serves the oxygen measurement. A small PC with 7" colour display and an app-based menu allow an intuitive operation on site as well as remotely.

LOWEST MEASURING RANGES

Component	Analyser with short path cell	Analyser with long path cell
NO:	0100 mg/m³	050 mg/m³
NO ₂ :	0200 mg/m ³	0100 mg/m³
NH ₃ :	030 mg/m³	010 mg/m³
SO ₂ :	0100 mg/m³	050 mg/m³
O ₂ :	025 vol. %	025 vol. %
Other components (e.g. CH ₂ O, H ₂ S, Cl ₂ , Hg ⁰) and measuring ranges on request.		

YOUR BENEFITS AT A GLANCE


- mobile hot-wet gas analyser in compact design
- · easy placement directly at the measuring point
- · long-term stable signal
- hot gas measurement up to 200 °C
- · no gas conditioning, no gas cooler needed
- low-maintenance measuring gas conveyance by ejector
- user-friendly touch display
- extension of measuring components without additional hardware possible
- · remote access

PRECONDITIONS ON SITE

- · installation place indoor and dust-free
- · protection against wetness
- · protection against percussions/vibrations
- instrument air* according to ISO 8573.1, class 2
- · appropriate gas sampling
- * instrument air supply unit available (option)



SCHEMATIC DESIGN

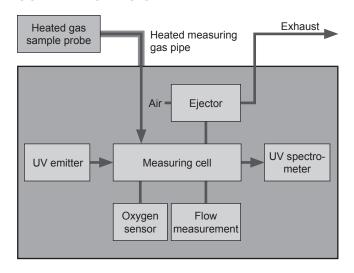

FUNCTION

The function of the UV analyser is based on the measurement of an integrated spectrometer in the spectral range of ultraviolet radiation of 180 to 400 nm. Fundamentally, the device is composed of light source, measuring cell and spectrometer which are interconnected via the optical path. The emitted radiation is absorbed partly by the process gas in the measuring cell and detected by a spectrometer afterwards. By using a chemometric model the gas component as well as the concentration can be determined.

Because of the modular design, there is the possibility for application of different spectrometers for adaptation to variable requirements.

TECHNICAL DATA		
Housing:	robust housing with compact 19" format, IP40; design as portable case; 530 mm x 162 mm x 530 mm (w x h x d), approx. 20 kg	
Measuring methods:	 spectrometer 180-400 nm (NO₂, SO₂, NO, NH₃, CH₂O, H₂S, Cl₂, Hg⁰) zirconium dioxide sensor (O₂) 	
Number of meas. components:	up to 12 components (dependent on application) and oxygen	
Accuracy:	< 2% of the respective measuring range	
Ambient conditions:	540 °C (temperature stability max. 5 K/h); humidity: max. 90% (non-condensing)	
Optical bench:	 gas path: continuously heated, standard 200 °C (higher temperatures on request) path length of measuring cell: adjustable short path cell: 260 mm long path cell: 730 mm particle filter: 2 µm 	
Zero point setting:	automatically with instrument air	
Measuring gas conveyance:	via ejector	
Display / Operating:	7" touch display, 800 x 480 Pixel, status messages for failure, maintenance and maintenance request; Language selection: German, English, French, Chinese	
Data storage:	data logger function	
Interfaces:	RS232 (Modbus)	
Inputs/outputs:	 8 analogue outputs, 420 mA, potential-free, burden max. 500 Ω 14 digital inputs (optocoupler), max. 30 V 16 digital outputs, potential-free, max. 60 V, 500 mA 	
Remote control:	VNC, remote control via PC	
Power supply:	110-250 V AC / 50-60 Hz, 350 W	
Other functions:	integrated flow measurement; integrated pressure monitoring	
Optional:	instrument air conveyance unitgas sampling equipment	
Special models are possible on reques	st.	

Dr. Födisch Umweltmesstechnik AG

Zwenkauer Strasse 159 • 04420 Markranstädt • Germany

Phone: +49 34205 755-0 • Fax: +49 34205 755-40

E-mail: sales@foedisch.de

